


Name of the set	Itemnumber of the set		Content	Quantity
	AM	KD		
Kickstand adapter set	AM325921086	KD325921086	Kickstand adapter	1
			Washer	1
			Bolt M6x20mm	1



1. Remove the rear wheel.
2. Remove the 3mm washer from the axle.

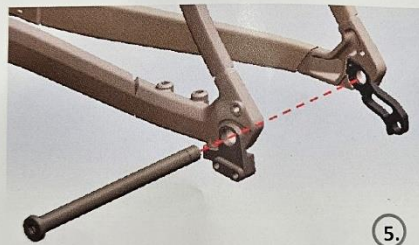

3. Put the **kickstand adapter** in the left dropout.
4. Insert the rear wheel again.
5. Shove the axle through the dropouts.



6. Mount the kickstand adapter using the **washer** and the **M6 bolt**. The tightening torque is 10Nm.